




# Sega Game Gear Case Replacement

How to open the Sega Game Gear case.

Written By: Lauren Thurston

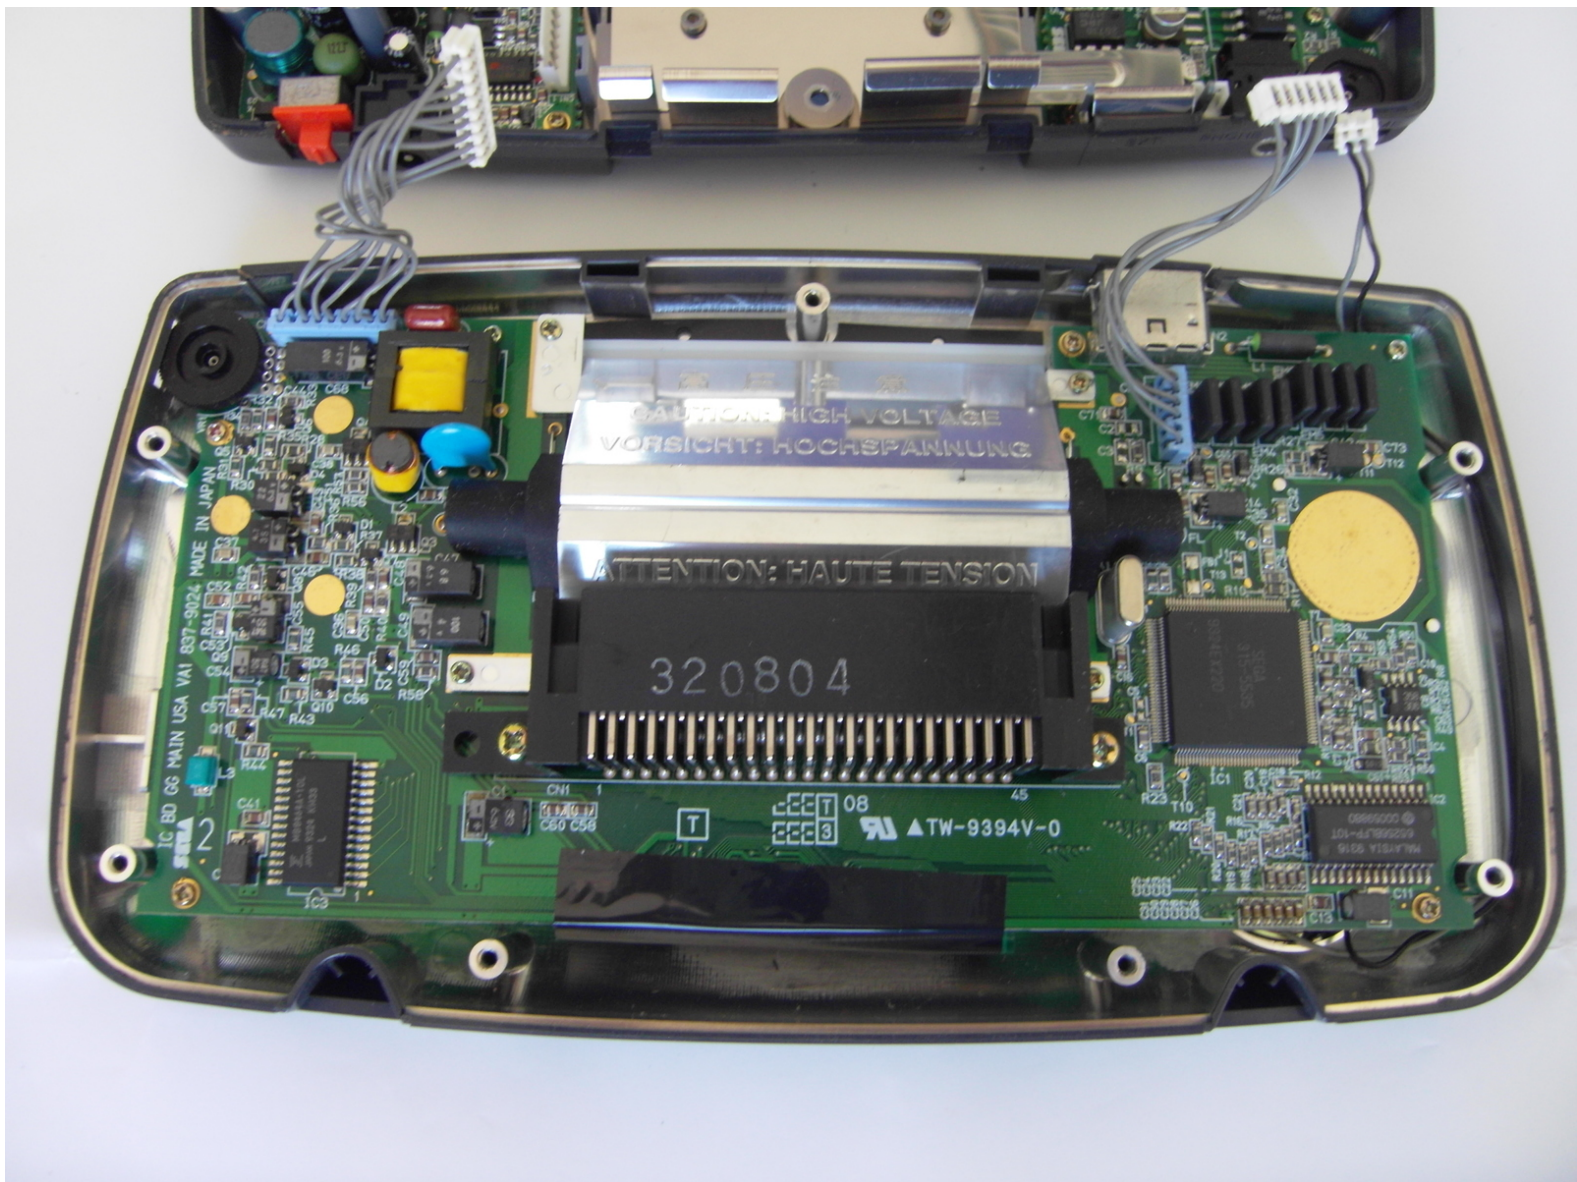

## INTRODUCTION

How to open the Sega Game Gear case.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Gamebit 4.5mm](#) (1)

*Bit available in the 64 bit kit*

---

## Step 1 — Battery



- Place your device upside down and locate the two battery compartments.

## Step 2



- Press on the tabs at the bottom of the battery covers then lift up to remove.
- Remove batteries if they are present.



## Step 3 — Case




- Remove the following screws:
  - Seven Phillips screws
  - One 4.5 mm Gamebit screw

## Step 4



- Use tweezers to take all other screws out.



## Step 5

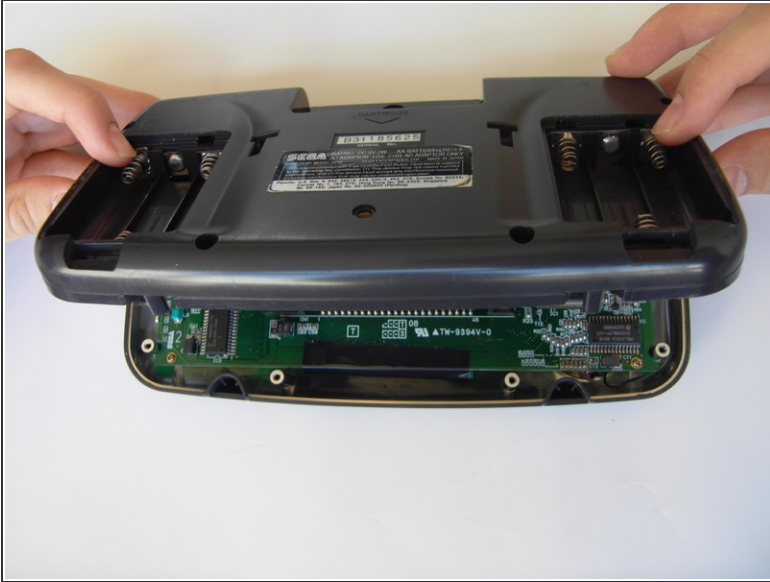

- Gently open the case by unfolding it over the top of the Sega Game Gear.

⚠ Do not pull the back of the case away, as cables are connected between both sides.

## Step 6

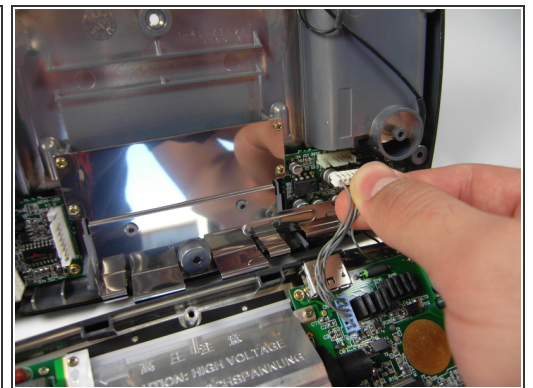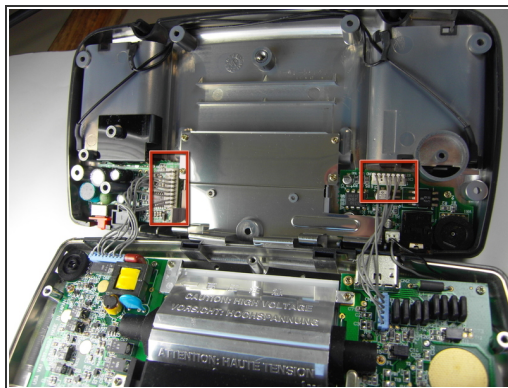

- Carefully unplug the 2 white-tipped connectors on the top cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 09:43:19 PM.